

Ready & Rest Mode

Commonly when the spa is not always heated to your chosen temperature this mean the spa is in "rest mode". In this mode the spa will only heat when the during the programmed filter cycles. If you want the spa to always be at your chosen temperature the mode needs to be changed to "ready mode".

To change modes use the follow steps:

First, to access the menu press the light button, then the warm up arrow button, and then the light button again. Then press the light button twice more until you reach the "MODE" option.



Your screen should look like this.



Then use the warm and cool buttons to change between REST & READY mode.



Then press the light button to set & confirm the mode.

